
Symmetrical

Drilling Recommendations


Drawings Based on Bowler PAP of 5 1/2" over by 1/2" up

Place Xtra Hole for low tops 8+" from grip center for more reaction


Strong Hard Hook
4 1/2" Pin x 3" CG to PAP

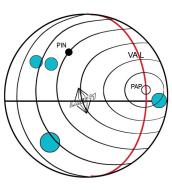


Length with Med Strong Arc 5 5/8" Pin x 3" CG to PAP

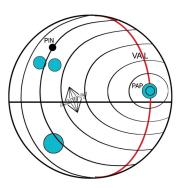

High Flare Strong Hook 4 1/2" Pin x 3 1/2" CG to PAP

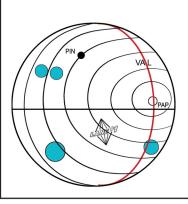


Long Roll + Smooth Backend CG 4 1/2" x Pin 1 3/4" to PAP

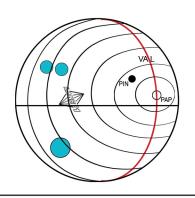


Lower Tracks move grip to the right, Lefty's use mirror image


More Midlane + Strong Roll 4 1/2" Pin x 4" CG to PAP

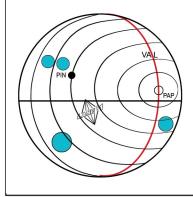


Short Pin Strong Leverage 4 3/8" CG x 3 3/8" Pin to PAP

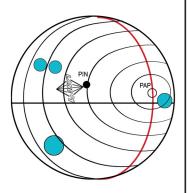

Length + Flip 5" Pin x 4" CG to PAP

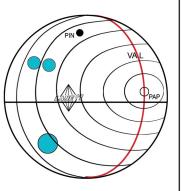


Long Continuous Backend 5 5/8" Pin x 2 1/4" CG to PAP

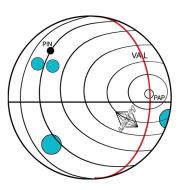


Place Pin under Fingers and CG below midline for earlier reaction

Short Pin Label

Early with Smooth Arc Rico

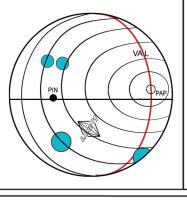

Long Pin Full Roller 7:30

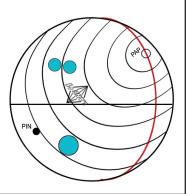

Short Pin Full Roller 7:30

